

# SAGE CINEMA LINE 4 QUICK LOOK WIRING GUIDE



**Four pair of speakers wires are needed. One for High-Pass, and one for Low-Pass for the top two modules and then two more for the bottom two modules.**

*The two modules that touch in the middle of the Line 4 do not get connected.*

**Then connect the top two modules together using small jumpers, and then do the same for the bottom two modules.**

